


FLEXIBATT PRO MIL

A portable power system designed for operations where both 230 V and 24 V power are required.

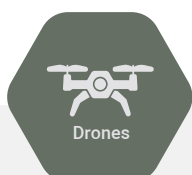

ABOUT

Built on the Flexibatt PRO platform, it delivers reliable energy for tools, communication equipment, and specialized field systems in demanding environments.

In addition to standard AC outlets, the system includes a dedicated 24 V connection for mission-critical equipment, as well as a 12 V outlet and USB-C ports for charging radios,

sensors, and portable electronics. This makes Flexibatt PRO MIL a practical all-in-one power solution for mobile operations.

With flexible charging from both grid power and solar panels, the system is well suited for remote locations where reliable power is essential.

Item No. NOR0002

Battery voltage	48 V nom.	IP rating	IP54
Capacity	2.5 kWh (2.4 kWh nom.)	Weight	26.5 kg
Built-in charger	10A (480W)	Dimensions (W x L x H)	557 x 429 x 216 mm
Output		Ambient operating temperature	
230V	2500 W	Discharge	-20 to +55°C
12V	240W (max)	Charging	+5 to +40°C
USB	2x100 (max)	Storage	-20 to +55°C

